



JP ENTERPRISES

JP MAGAZINE WELL FOR GLOCKS

PARTS INCLUDED

- Glock mag well
- Retention plug piece
- One (1) 6-32 x 1/2" socket head cap screw

CAUTION: REMOVE MAGAZINE AND VISUALLY CHECK CHAMBER TO MAKE SURE THAT FIREARM IS UNLOADED.

Before beginning the installation of the JP Magazine Well, note the angle and minimal resistance of the socket head screw as it threads into the retention plug. During the installation, the insertion of the screw will not be visible, and it may become crossthreaded. If the screw resists at all, back it out and try again if the screw will likely break and ruin the plug.

Begin by inserting the retention plug into the cavity at the rear of the grip frame so that the threaded hole is on the bottom. Hook the front of the magazine well over the front of the magazine opening on your Glock, and rotate it onto the gun. Using a 7/64" hex key, install the 6-32 socket head cap screw and tighten. You may want to use a drop of removable thread locker like Loctite 242 on the screw.

As a Glock owner, you may also be interested in our trigger enhancement service. This is a series of modifications we perform to your Glock to give a nearly single-action trigger feel with a clean, short break and minimal overtravel and short reset. It's a night and day difference on any Glock and affords you much better trigger control resulting in improved accuracy and speed. Our turnaround time on this service is two weeks or less. Please call us or refer to our website for further details and directions for shipping us your pistol.

THANKS FOR YOUR BUSINESS!