



PARTS INCLUDED

- Trigger shoe
- Roll pin

CAUTION: REMOVE MAGAZINE AND VISUALLY CHECK CHAMBER TO MAKE SURE THAT FIREARM IS UNLOADED.

INSTALLATION INSTRUCTIONS

1. Remove the trigger (or trigger module) from the lower receiver.
2. Use a 1/16" punch to drive out the roll pin securing the trigger shoe in place. This pin is located at the top of the trigger shoe.
3. Slide the current trigger shoe forward and off the trigger body. In the case of the JPFC-M module, you may need to rock the trigger body forward to create enough clearance. If so, ensure that the hammer is not cocked, and push up on the rear of the trigger body to rock it forward.
4. Slide the new trigger shoe on from the front of the trigger body. If you meet resistance, clean the contact areas of any debris and try again.
5. Line up the hole in the trigger shoe with the half-moon slot in the trigger body. Drive in the supplied roll pin. The roll pin should be just flush on both sides of the shoe.
6. Reinstall the trigger or trigger module as before.

THANKS FOR YOUR BUSINESS!