

***JP Recoil Eliminator with Harmonic Stabilizer  
or harmonic stabilizer only***

***Parts Included:***

- Harmonic stabilizer
- Two (2) O-rings
- Recoil eliminator (JPRE-HT only)

---

***Installation Instructions***

***CAUTION: REMOVE MAGAZINE AND VISUALLY CHECK CHAMBER TO MAKE SURE THAT FIREARM IS UNLOADED.***

Slide the stabilizer collar, threaded side forward, over the barrel before installing the recoil eliminator or thread adapter. Secure the recoil eliminator as per the instruction on the reverse side using Loctite 271 for a solid bond in the level position. Now, bring the stabilizer collar forward and screw it onto the recoil eliminator or the thread adapter.

To tune the stabilizer, start with the stabilizer in the maximum forward position and fire a group with the ammunition you intend to use. Be aware that the position of the stabilizer will vary with the load for maximum effect. Adjust the stabilizer one complete rotation and fire another group. Find the "sweet spot" and then try adjusting within that 360° range for a fine tune.

If you intend to use primarily one load, mark your adjustment point and then back off the collar and use Loctite 271 to permanently set the collar back at that point. This bond can be broken with a little heat from a propane torch to the collar at the threaded end if so desired, but be sure to put a wet towel on the opposite end to protect the O-ring from heat damage. Loctite 242 can also be used to give a semi-permanent fix of the collar.