



J P E N T E R P R I S E S

J P P S C C O M P L E T E U P P E R R E C E I V E R K I T

CAUTION: REMOVE MAGAZINE AND VISUALLY CHECK CHAMBER TO ENSURE THAT FIREARM IS UNLOADED.

The JP PSC complete upper receiver assembly is the key to integrating the innovative JP side-charge system into your next small-frame gas gun build. Machined from billet 7075-T6 aluminum, the PSC-11 versions and all its components will be compatible with any lower receiver with Mil-spec tolerances including the JP-15 and CTR-02, both of which can be purchased as stripped receivers or complete lower assemblies from JP. The PSC-12 version is available in two versions, one compatible with any DPMS LR-308 lower receiver (or clone thereof) and the other compatible with any lowers patterned on the Armalite AR-10 design. Both PSC-12 versions accept only DPMS-pattern hand guards. Particularly in the case of the Armalite PSC-12 kit, keep in mind that fitment of the upper receiver will vary between lower assemblies from different manufacturers.

As the most distinct feature of the PSC-URA kit, the side-charging system merits explanation in order to achieve optimal usage. To disassemble the charging system, begin by extracting the bolt carrier assembly. Then, move the charging handle assembly to the rear where there is a takedown notch. With the handle held out, lift the charging handle slider off the receiver rail through this notch. To reassemble, lift the handle away from the charging handle slider assembly. Then, lower the slider into the takedown notch of the receiver rail and slide it forward until it comes to a stop in the forward position.

Once your rifle is assembled with the PSC-URA kit, you will be able to lock the rifle action open without a magazine using either the standard top charging handle or the side-charging handle. For the latter, use one of the following techniques:

Method 1: Hold the rifle with your right hand on the pistol grip and your finger out of the trigger guard. With your left hand, pull the action open all the way to the rear. When the action reaches the end of travel, use the middle finger of your left hand to actuate the bolt catch lever by pressing in at the bottom. With a little practice, this is a very fast manual lock back technique that allows you to retain your shooting/control grip on the weapon.

Method 2: This technique is preferable if you have small hands and can't reach the bolt stop with your middle finger while holding the charge handle to the rear. Begin by securing the rifle buttstock under your right arm. Pull the action all the way to the rear using the charging handle. Reach underneath the rifle and cup the magazine well with your right hand, and then use the index finger of your right hand to actuate the bolt stop.

THANKS FOR YOUR BUSINESS!

Visit us at www.jp Rifles.com

Rev. 06.14

P.O. Box 378, HUGO, MN 55038 | VOICE: 651-426-9196 | FAX: 651-426-2472